



### Calibration

The calibration adjustment screw is located down the center to the shaft.

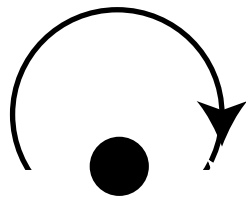

To Increase

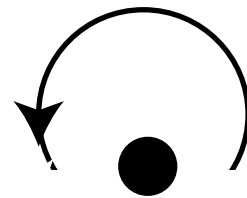

To Decrease